GS100 Tech Sheet

Balboa Water Group System PN 56094

System Model # MM7-GS100-DCA-2.0K Software Version # 41 EPN # 3449

Base PCBA - PN 54677 PCB VS100 - PN 22964 Rev B

Base Panels
VL200 (Mini) – PN 55123
VL240 (MVP240) – PN 55080
VL260 (MVP260) – PN 55081
VL401 (LCD Lite Duplex) – PN 54665

VL403 (LED Lite Duplex) – PN 54664





Basic System Features and Functions


Power Requirements

- 230VAC, 1~, 16A, 50Hz
- 3 wires (line, neutral, ground)

System Outputs

Setup 1 (As Manufactured)

- 230V Pump 1, 2-Speed
- 230V Ozone
- 10V Spa Light
- 230V 2.0kW Heater PN 56095

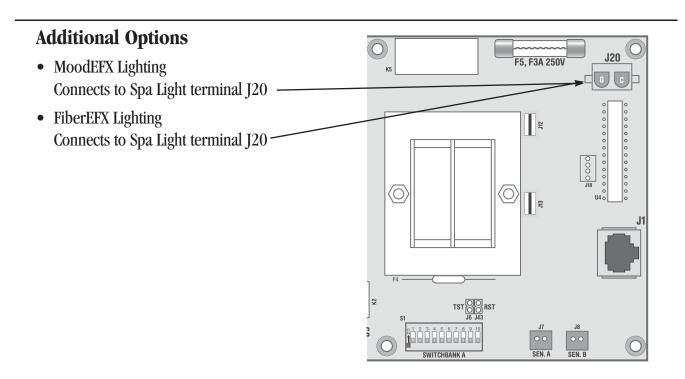

Page 2 56094_97_A

Basic System Features and Functions

Any time you change a DIP Switch, other than A1, you must reset Persistent Memory for your new DIP Switch Settings changes to take effect. If you do not reset Persistent Memory, your system may function improperly.

To reset Persistent Memory:

- Power down by disconnecting power source from spa.
- Put a jumper across J43, covering both pins. (See illustration below)
- Power up by connecting power source to spa.
- Wait until "P-" is displayed on your panel.
- Power down again.
- Remove jumper from J43 (May also move to cover 1 pin only)
- Power up again.

About Persistent Memory and Time of Day Retention:

This system uses memory that doesn't require a battery to store a variety of settings. What we refer to as Persistent Memory stores the filter settings, the set temperature, and the heat mode.


Persistent Memory is not used for Time of Day. Only models with a Serial Deluxe panel installed (VS5xxDZ and GS5xxDZ) can display the time. However, during power loss to the spa, the system will lose the correct time, and reset to 12:00 PM when power is restored.

Power Up Display Sequence

Upon power up, you should see the following on the display:

- Displayed next is: "ヹ゚゙゙゙゙゙゙゙゙゙゙゚゚ヹ゚" (indicating the system is configured for a heater between 3 and 6 kW) or "tヹ" (indicating the system is configured for a heater effectively* between 1 and 3 kW).
 "ヹ゚゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゙゚゚ should appear for all VS models running at 240VAC.
 "tヹ" should appear for all VS models running at 120VAC, as wel as all GS models. (*A heater which is rated at 4 kW at 240VAC v function as a 1 kW heater at 120VAC.)
- "P-" will appear to signal the start of Priming Mode.

At this point, the power up sequence is complete. Refer to the Refere Card for the VS or GS System model of your spa for information about the spa operates from this point on, including how to adjust the Time Day if using a Serial Deluxe style panel.

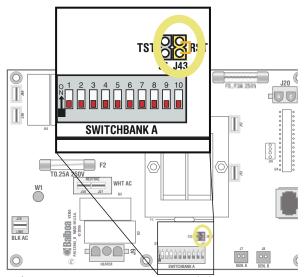

J43 on VS100/GS100 Series Main Board Shown.

Page 3 56094_97_A

Wiring Configuration and DIP Settings

Setup 1 (As Manufactured)

- 230V Pump 1, 2-Speed
- 10V Spa Light
- 230V Ozone


- 230V 2.0kW Heater PN 56095
- VI.401 Main Panel

HiPot Testing Note:

Disconnect slip terminal with green wires from J90 prior to performing HiPot test. Failure to disconnect will cause a false failure of the test.


Reconnect terminal to J90 after successful completion of HiPot test.

Ozone runs with Pump 1 low-speed.

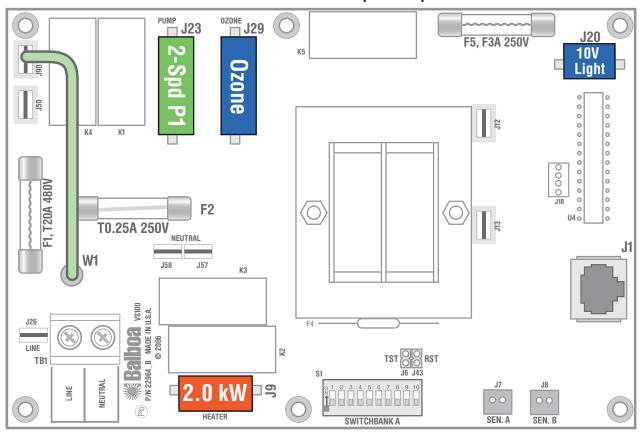

WARNING: Main Power to system should be turned OFF BEFORE adjusting DIP switches.

 WARNING: Persistent Memory (J43) must be RESET to allow new DIP switch settings to take effect. (See Persistent Memory page)



Switchbank A

3

A1, Test Mode OFF

A6, 50 Hz A2, P1, LT, TD, TU A7, Mode changes allowed

A3, Duplex Panel

A8, Degrees C

A4, N/A (must be OFF)


A9, P1-low timeout, Table 1

A5, P1-high timeout, Table 1 A10, Low Amp mode

Panel Button Assignments 1=Pump 1 3=Temp Down

2=Light 4=Temp Up

Panel Button Positions

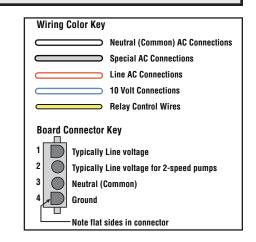

56094_97_A

Page 4

J43

Memory

Reset

DIP Switches and Jumpers Definitions

SSID 100 59 41

Base Model GS100

Table 1

A9

OFF

OFF

ON

ON

A5

OFF

ON

OFF

ON

Pump 1 Timeouts

Low-spd

2 hours

2 hours

15 min

30 min

Hi-spd

15 min

30 min

15 min

30 min

DIP Switch Key

- A1 Test Mode (normally OFF)
- A2 "ON" position: Button layout will be: Pump 1, Light, Temp Down, Temp Up *
- "OFF" position: Button layout will be: Unused, Pump 1, Temp, Light
- - "OFF" position: use Lite Duplex or Digital Duplex panel
- A4 N/A (must be OFF)
- A5 Pump 1 high-speed timeout, see Table 1
- A6 "ON" position: 50Hz operation "OFF" position: 60Hz operation
- A7 "ON" position: Standard mode only
 - "OFF" position: Std/Ecn/Sleep mode changes allowed
- A8 "ON" position: temperature is displayed in degrees Celsius "OFF" position: temperature is displayed in degrees Fahrenheit
- A9 Pump 1 low-speed timeout, see Table 1
- A10 "ON" position: heater is disabled while the high-speed pump is running (low amperage mode) "OFF" position: heater can run while the high-speed pump is running (high amperage mode)
- * Panels with button layout 🗒 " are not compatible when A2 or A3 is ON.

Note: No blower or second pump available.

Jumper Key

When jumper is placed on 2 pins during power-up, system will reset persistent memory. Leave on 1 pin only to enable persistent memory feature.

WARNING:

- Setting DIP switches incorrectly may cause abnormal system behavior and/or damage to system components.
- Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system.
- Contact Balboa if you require additional configuration pages added to this tech sheet.

1=Pump 1

2=Light

A2:ON

Panel Button Positions A3:OFF 1 2 3 4 2 A3:ON Panel Button Assignments Panel Button Assignments 1=Unused 3=Temp 2=Pump 1 4=Light

 
3=Temp Down


4=Temp Up

Ozone Connections

Note: A special tool is required to remove the pins from the connector body once they are snapped in place. Check with your Balboa Account Manager for information on purchasing a pin-removal tool.


Balboa Ozone connector configuration for 230VAC 50Hz:



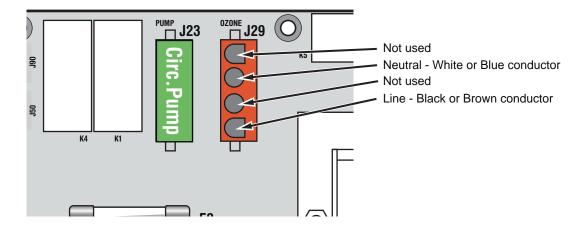

Page 6 56094_97_A

Duplex Panel Configurations

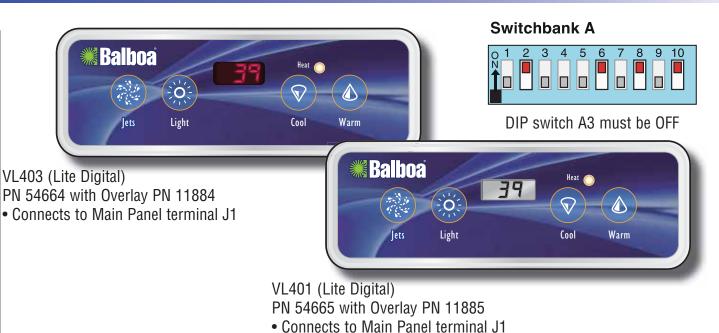



VL200 (Mini Panel)

PN 55123 with Overlay PN 11852

Connects to Main Panel terminal J1 Balboa Light Cool Warm

VL240 (MVP240)

PN 55080 with Overlay PN 11745

Connects to Main Panel terminal J1



Switchbank A

DIP switch A3 must be ON

VL260 (MVP260)

PN 55081 with Overlay PN 11746

Connects to Main Panel terminal J1