

Quick Install Guide For bwa™ Kit - BP500/600

TOOL YOU WILL NEED

- Phillips screwdriver 

WARNING!


Please contact an electrician or your local electrical company to connect the Wi-Fi connector for you. **DO NOT OPEN THE SPA SYSTEM AND ATTEMPT TO CONNECT THE WI-FI CONNECTOR YOURSELF.** The high electrical voltage will harm or kill you.

STEP 1




- Use a phillips screwdriver to remove the 2 top screws that hold the system cover in place.

STEP 2

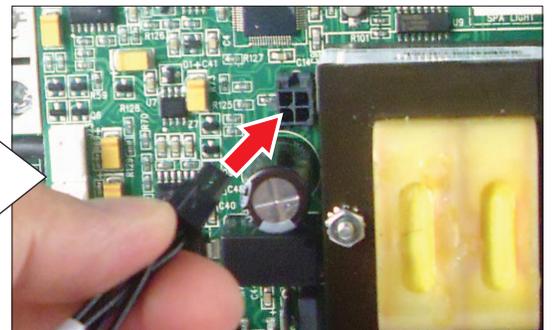

- Insert the Y-cable (25657) in Panel Jack C14.

STEP 3

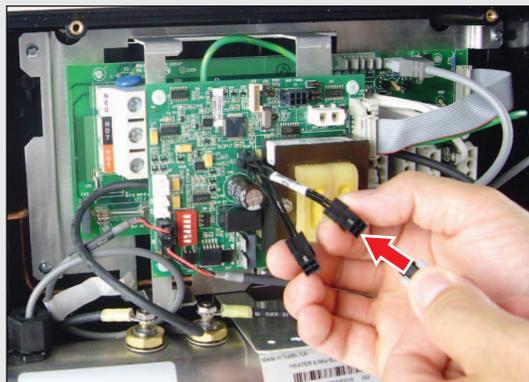


- Insert the Balboa Wi-Fi Cable into the first end of the Y-Cable (25657) Panel Jack.




- Insert your Control Panel into the second end of the Y-Cable Panel Jack.

STEP 4

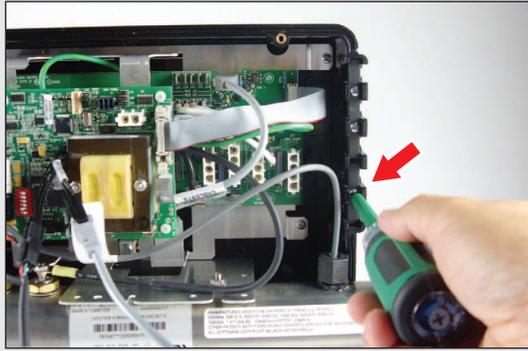

– Remove 1 screw to open the cable holder.

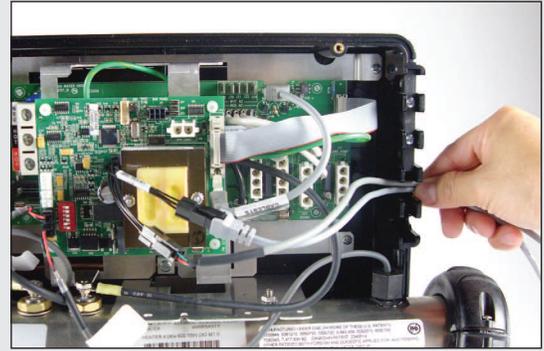


– Place the Wi-Fi cable and Control Panel cable inside the wire holder.

STEP 5




– Insert the plastic holder and screw back in place. Make sure the 2 cable wires are secure in place.

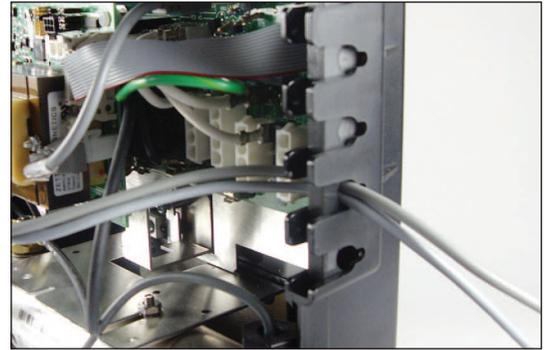

– Close up shot of how the 2 wires should look.

– Close the Control Panel System cover and secure the 2 top screws. **YOU'RE DONE!**

This is how your system should look like when finished.

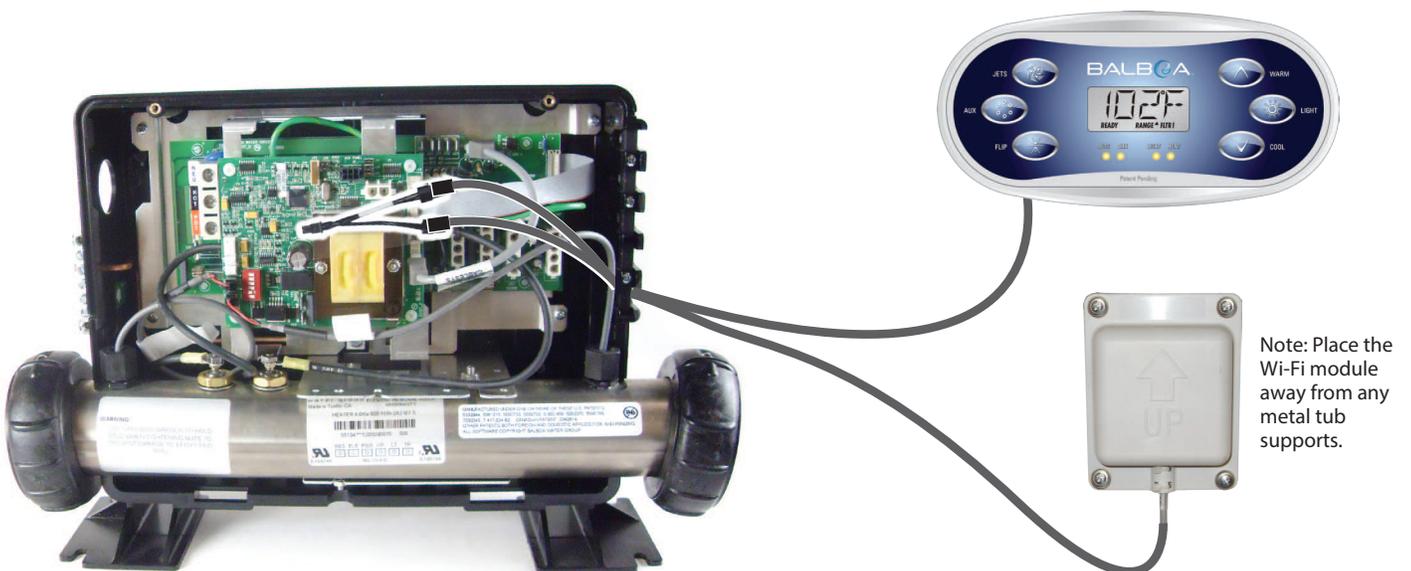

0917BP500/600

©2017 Balboa Water Group. Single Source Solution. All rights reserved.
1382 Bell Avenue | Tustin, CA 92780 | p 714.384.0384 | www.balboawater.com
Balboa has the right to change technical data without notice.

BALBOA
water group